


Slush machine manual



Parameter


Model	Voltage	Power	Refrigerant	Hopper	Cylinder	Production	Dimension	N.W.
ICM-100	110V/220V 50Hz/60Hz	1.4kW	R410A	11Lx1	4Lx1	18-25L/hr	34*71.5*95 cm	75kg
ICM-101	110V/220V 50Hz/60Hz	1.8kw	R410A	11Lx2	4Lx2	50-55L/hr	51*71.5*89 cm	105kg
ICM-108	110V/220V 50Hz/60Hz	2.2kw	R410A	11Lx3	4Lx3	70-80L/hr	77.5*73.5* 93cm	120kg

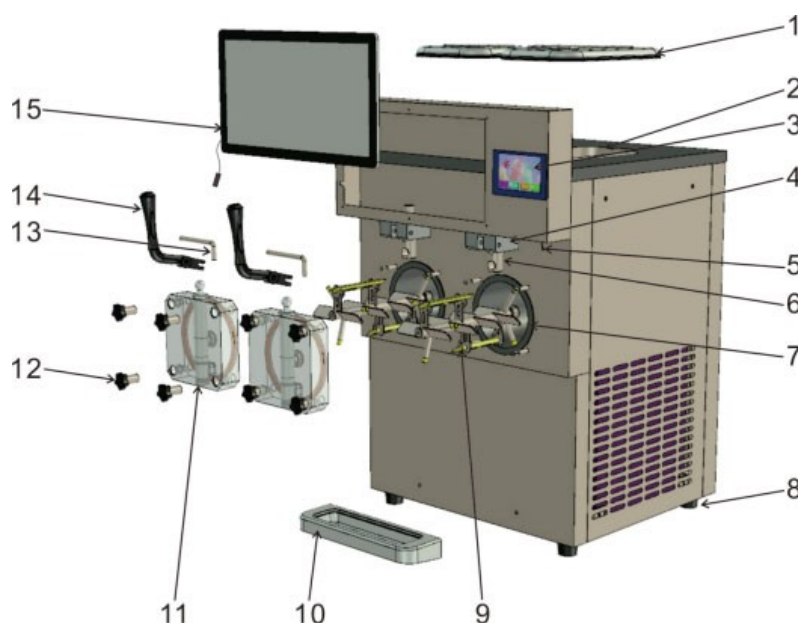

1. cover 2. hopper 3. control panel 4. handle seat
 5. Power switch 6. upper plunger 7. freezing cylinder
 8. Footstand 9. Beater assembly 10. drip tray
 11. discharge door assembly
 12. Nut 13. cross-bar 14. handle
 15. LED light screen


Discharge door assemble

1. plunger
 2. O ring $\phi 24 \times 3.7$
 3. discharge door body
 4. O ring $\phi 160 \times 8$
 5. axle sleeve

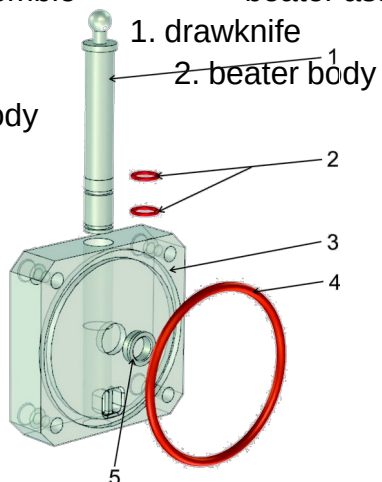


beater assemble

1. drawknife
 2. beater body

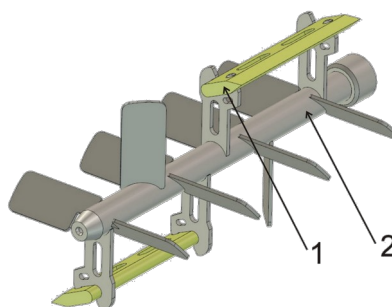

1) ICM-100 single flavor touch screen




1. Precool key
2. Stop key
3. Set parameter key
4. Voltage display
5. Discharge count display
6. error code display
7. wash key
8. cool key
9. current temperate display
10. set target cool temperate

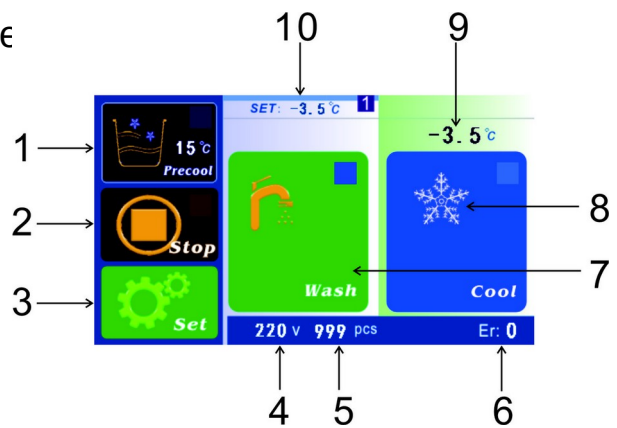

2 ICM-101 two flavors touch screen

ICM-108 three flavors touch screen

1. precool key
2. stop key
3. Set parameter key
4. Voltage display
5. Discharge count display
6. Error code display
7. Wash key
8. Cool key
9. Current temperate display
10. Set target cool temperate

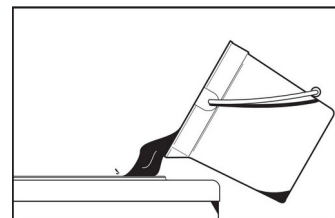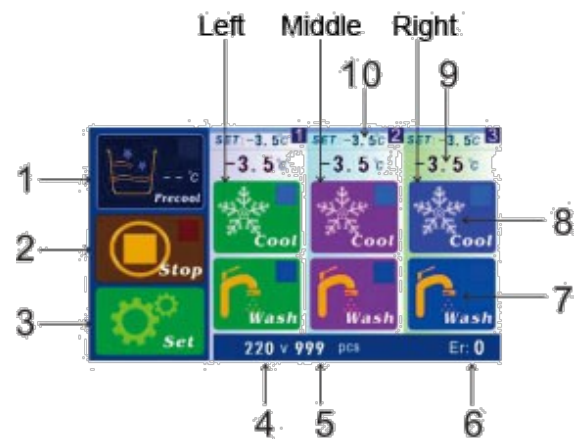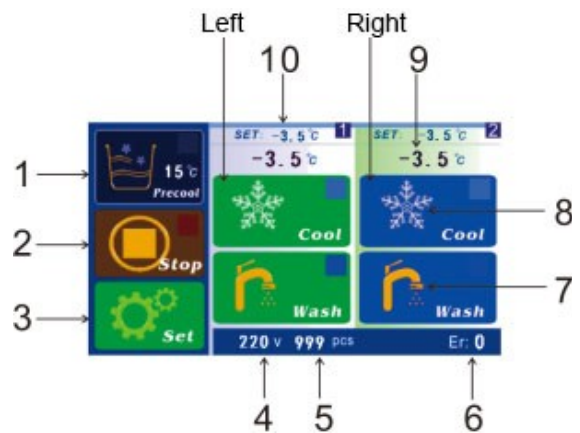

Warning: In the absence of added ingredients,

Before using the machine's cylinder, it must be cleaned and disinfected.

The machine is prohibited from refrigeration operation


1. Power on

Turn on the switch


2. Cooling operation

Press the key “cool” , the machine begin to cool press the key “stop” machine stop working.


Model: single flavor

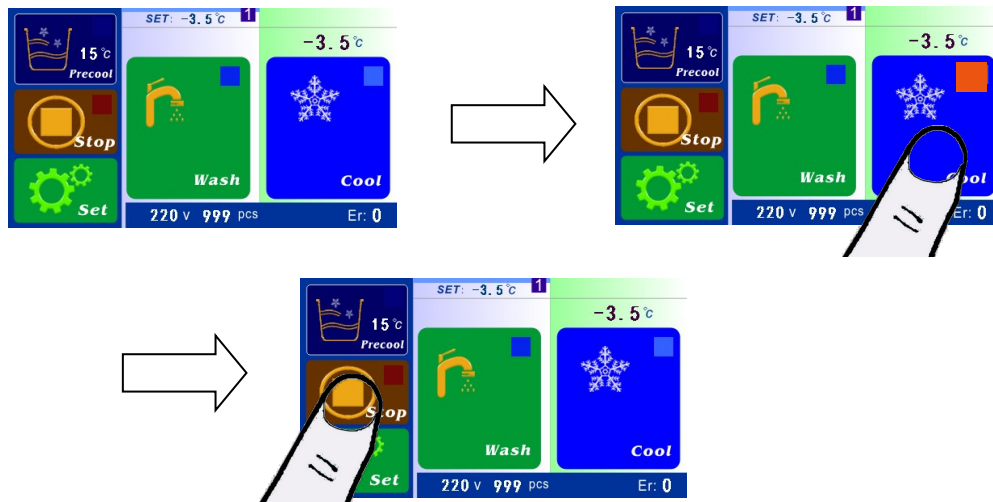


Two flavors:

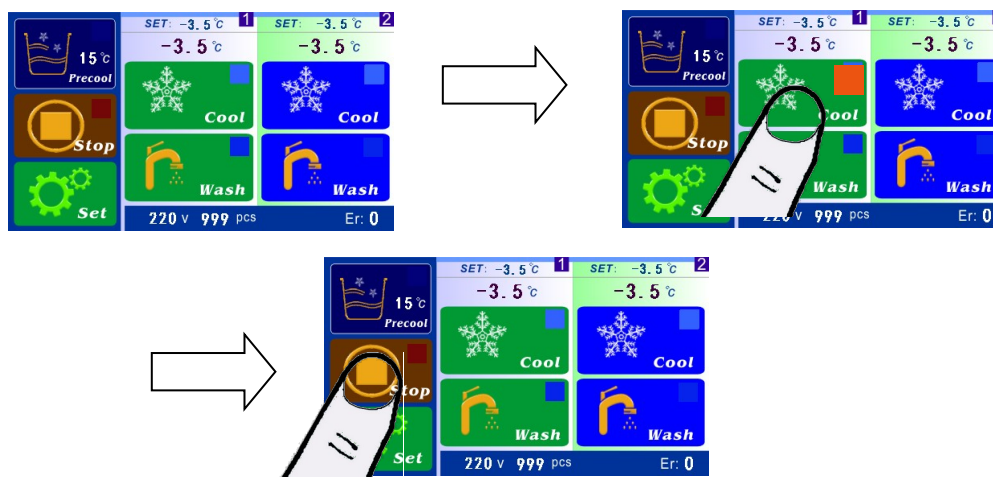


Three flavors

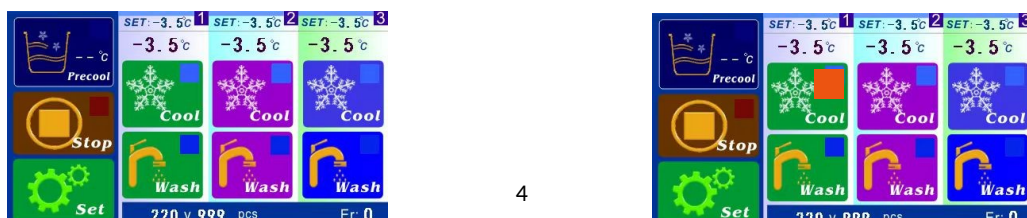

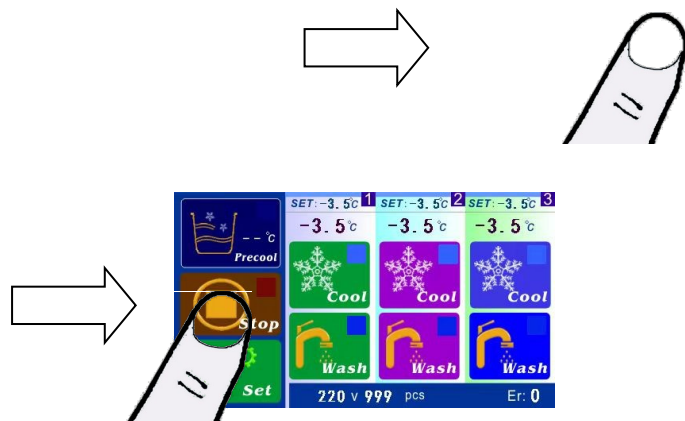


3. wash operation


press the key “wash” the beater turns press the key “stop” machine stop working
model single flavor

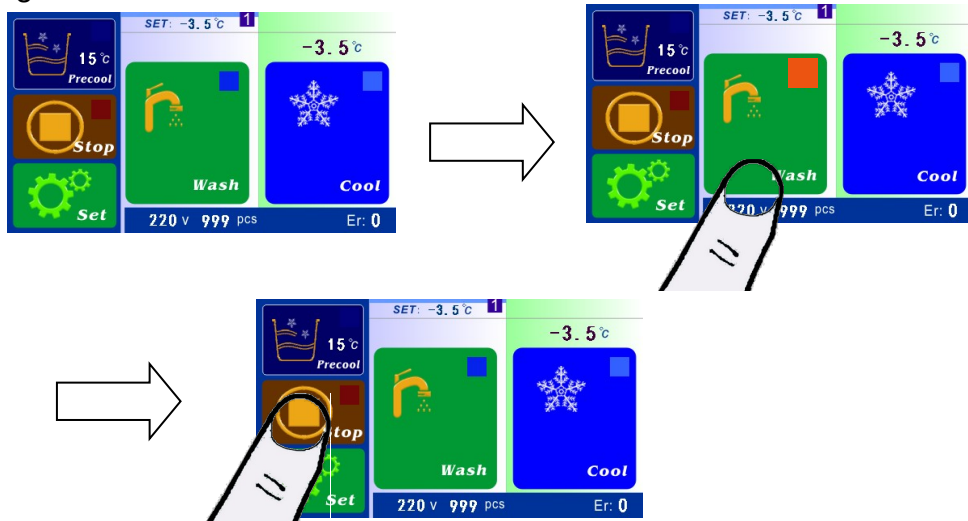


model : two flavors

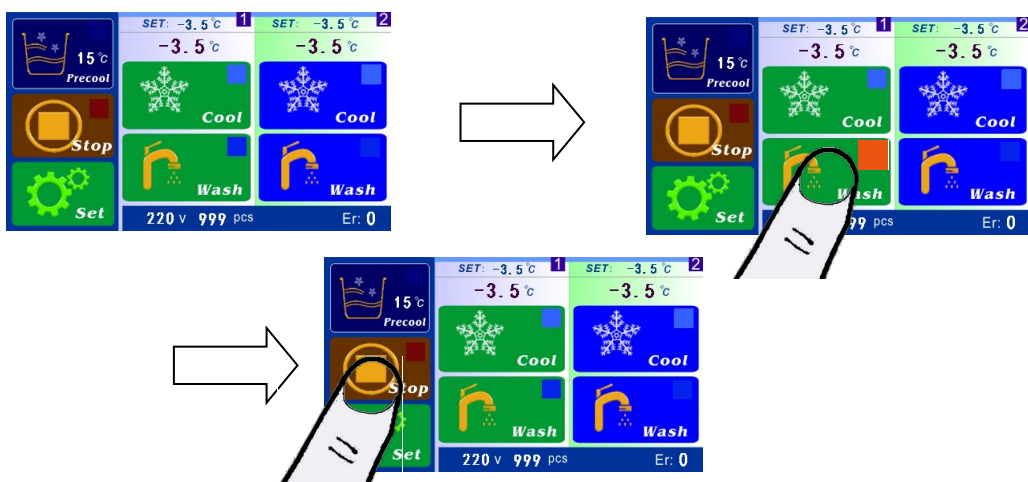


model: three flavors

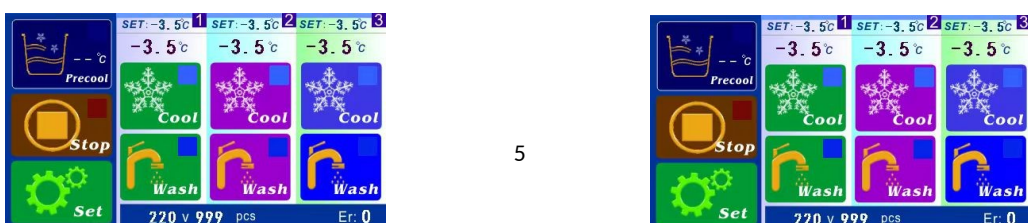

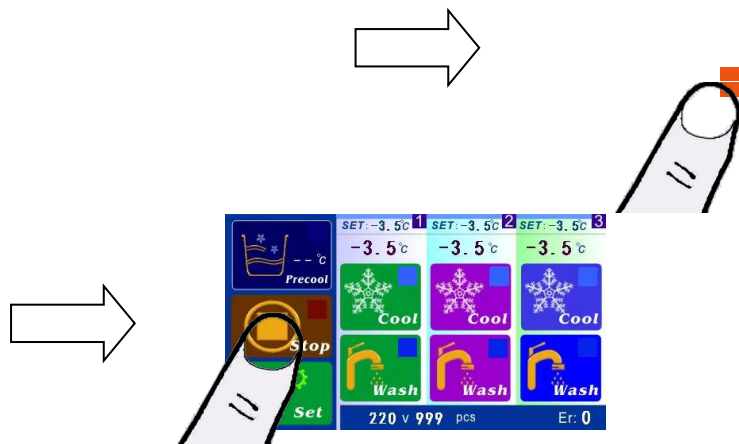

4. Precool operation:


Press the key “precool” if stop working , press the key “precool” again.

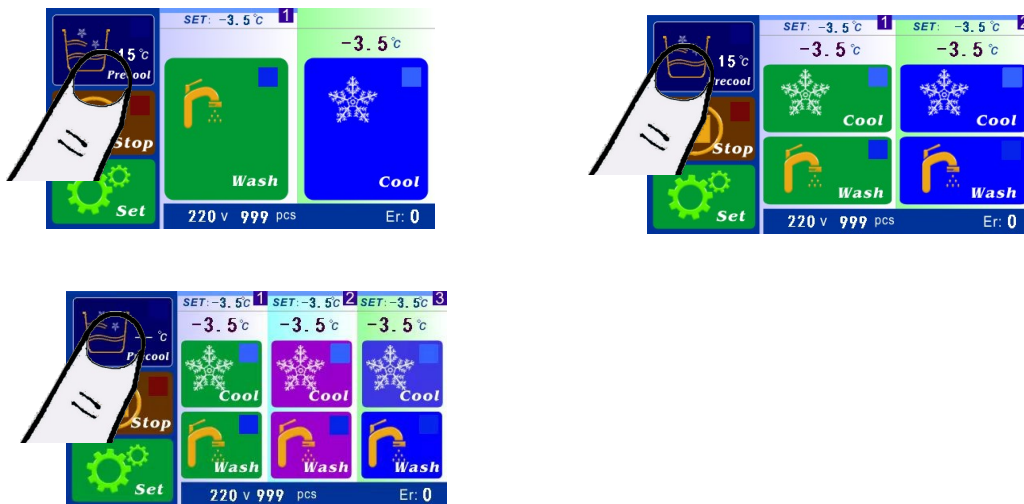

1. count the discharge


Each time, the system counter will record a system maximum count value is "999", clear operation press

"Set", and then enter the password "1234" to clear the zero input.

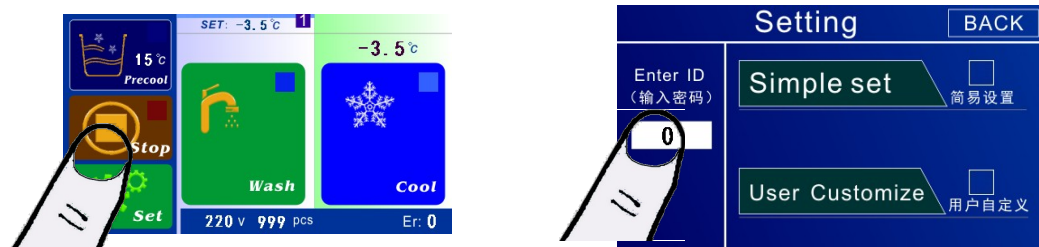

Error code

Alarm display if the machine fails. To find and remove, press "6" ER's location.

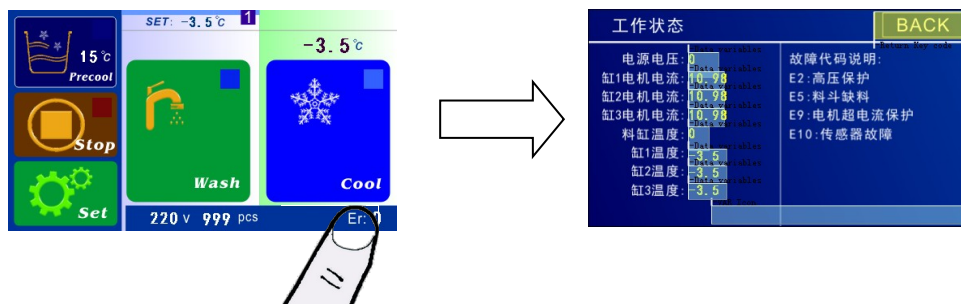

E5 Missing material alarm	The hopper needs to be replenished
E10 Temperature sensor alarm	The temperature sensor can go offline, be loosely installed, or be damaged. Please reinstall or replace it.
E9 Overload protection alarm	Stop cooling and press the thaw button to soften. Or the proportion of water in the raw material is less, and the proportion of sugar needs to be added.
E2Overpressure protection alarm	The air outlet is blocked, resulting in high system gas pressure. Need to get rid of the vent block.

Note: The capacity of raw materials placed in each side hopper and refrigeration cylinder of the machine is specified as follows: maximum 15 liters and minimum 5 liters.